



CAMERON FULLER 'SURF' GLIDERS

SURF 60

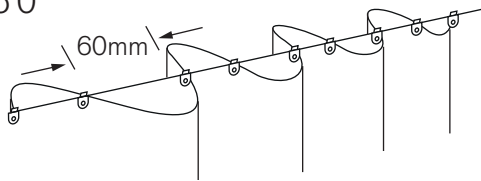


Standard wall brackets will allow curtains to stack back correctly with SURF 60

SURF 80

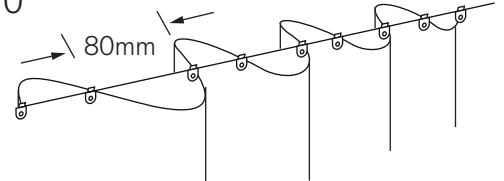


Use adjustable 75 -105 wall brackets to allow curtains to stack back correctly with SURF 80


Cameron Fuller magnetic glider brakes are included with all surf glider packs

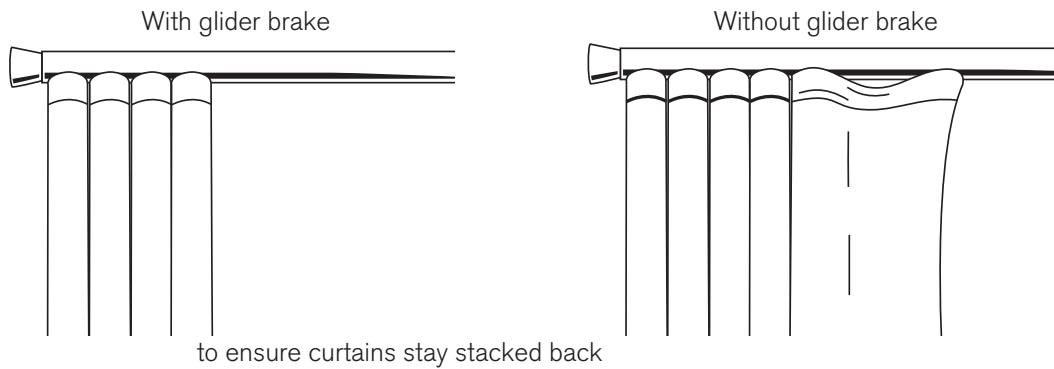

MAGNETIC GLIDER BRAKE

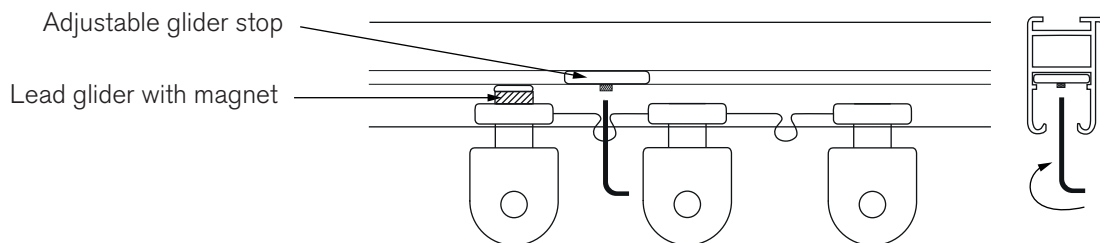

SURF 60

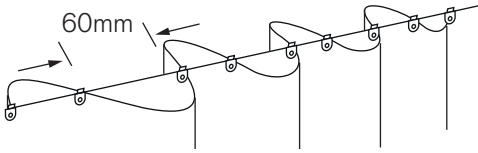


60mm separated glider cord, track length required for single and pair of curtains

Track length, mm	Single Number of gliders	Pair Number of gliders
900	16	10
1020	18	10
1140	20	12
1260	22	12
1380	24	14
1500	26	14
1620	28	16
1740	30	16
1860	32	18
1980	34	18
2100	36	20
2220	38	20
2340	40	22
2460	42	22
2580	44	24

Track length, mm	Single Number of gliders	Pair Number of gliders
2700	46	24
2820	48	26
2940	50	26
3060	52	28
3180	54	28
3300	56	30
3420	58	30
3520	60	32
3660	62	32
3780	64	34
3900	66	34
4020	68	36
4120	70	36
4260	72	38
4380	74	38
4500	76	40
4620	78	40
4740	80	42
4860	82	42
4980	84	44
5100	86	44
5220	88	46
5340	90	46
5460	92	48
5580	94	48
5700	96	50
5820	98	50
5940	100	52

SURF 80

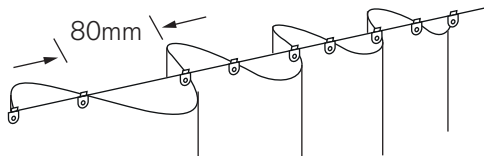

Use surf 80 rather than surf 60 to reduce the curtain stackback 80mm separated glider cord, track length required for single and pair of curtains

Track length, mm	Single Number of gliders	Pair Number of gliders
880	12	8
1040	14	8
1200	16	10
1360	18	10
1520	20	12
1680	22	12
1840	24	14
2000	26	14
2160	28	16
2320	30	16
2480	32	18

Track length, mm	Single Number of gliders	Pair Number of gliders
2640	34	18
2800	36	20
2960	38	20
3120	40	22
3280	42	22
3440	44	24
3600	46	24
3760	48	26
3920	50	26
4080	52	28
4240	54	28
4400	56	30
4560	58	30
4720	60	32
4880	62	32
5040	64	34
5200	66	34
5360	68	36
5520	70	36
5680	72	38
5840	74	38
6000	76	40